



PRODUCT INFORMATION

BROCHURE

E★STAR SEISMIC DETONATORS



E★STAR Seismic electronic detonators have been designed to provide the precise control necessary to produce the most accurate and consistent seismic record. The E★STAR Seismic detonator may be programmed in 1-millisecond increments from one (1) millisecond up to twenty (20) seconds. using the dedicated DLG 1600-100-S Logger. Unique serial number for each E★STAR Seismic detonator provides “Cradle to Grave” traceability.

PRODUCT OVERVIEW

ADVANTAGES


- 750 mg PETN base charge far exceeds the standard #8 strength detonator.
- Industry’s most user-friendly and rugged electronic seismic detonator.
- Designed to fire pattern shots up to ten detonators simultaneously.
- Legwire – HDPE insulation for added protection from current leakage. 0.8 mm diameter copper wire (#20 AWG).
- Advanced pre-fire diagnostics coupled to the communication protocol.

PROPERTIES



E★STAR Seismic detonators contain a capacitor, a logic and timing circuit, and pyrotechnic ignition system manufactured by Austin Powder to provide a complete unit. When the capacitor is charged by the DBM 10-S Digital Blasting Machine, the internal capacitor provides the energy that initiates the “bridge wire” and subsequently detonates the base charge.

E★STAR SEISMIC DETONATORS

E★STAR DLG1600-100S Seismic Logger

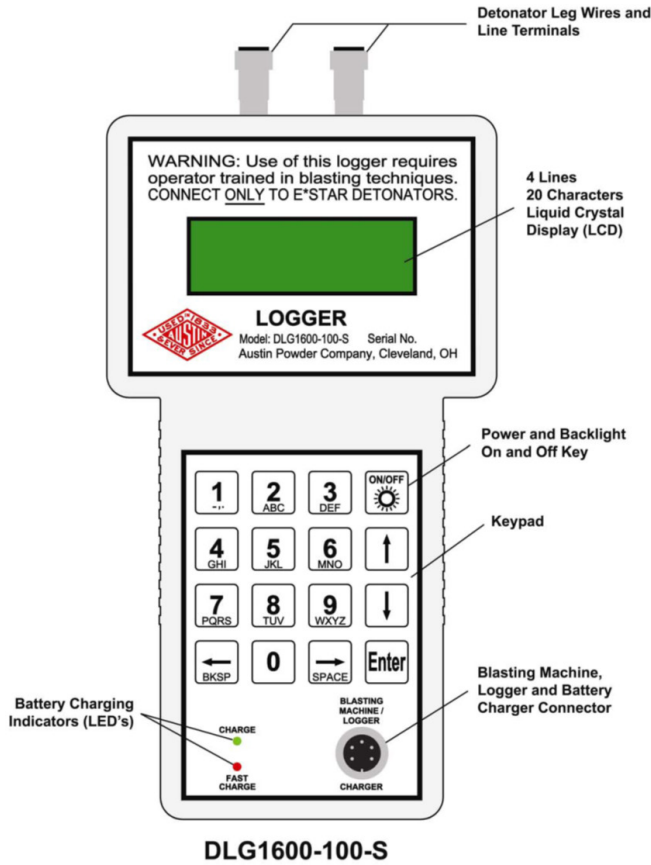

E★STAR DBM 10-S Digital Blasting Machine

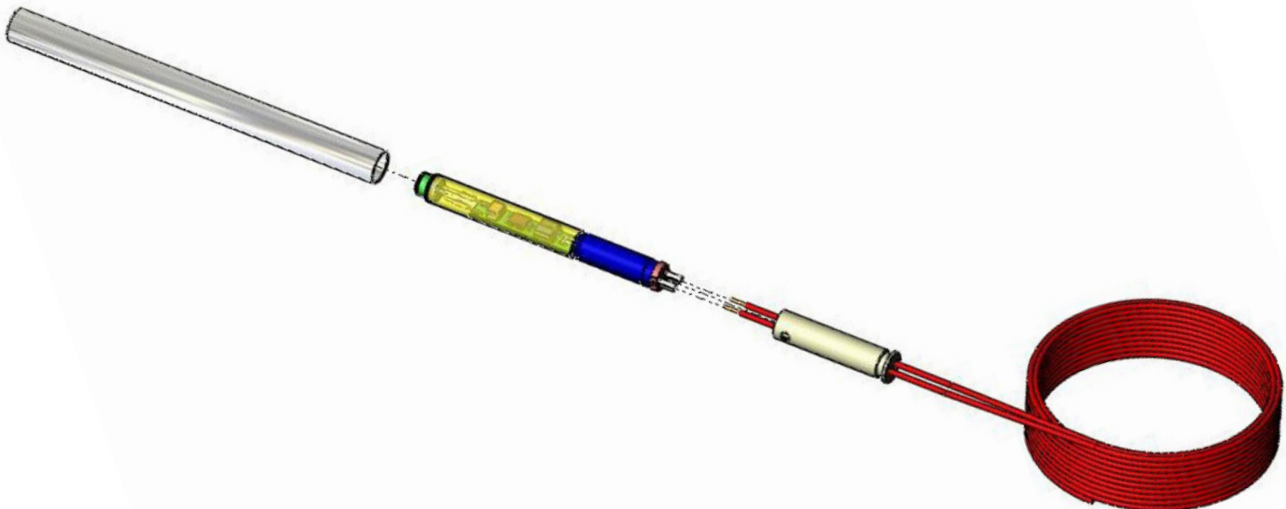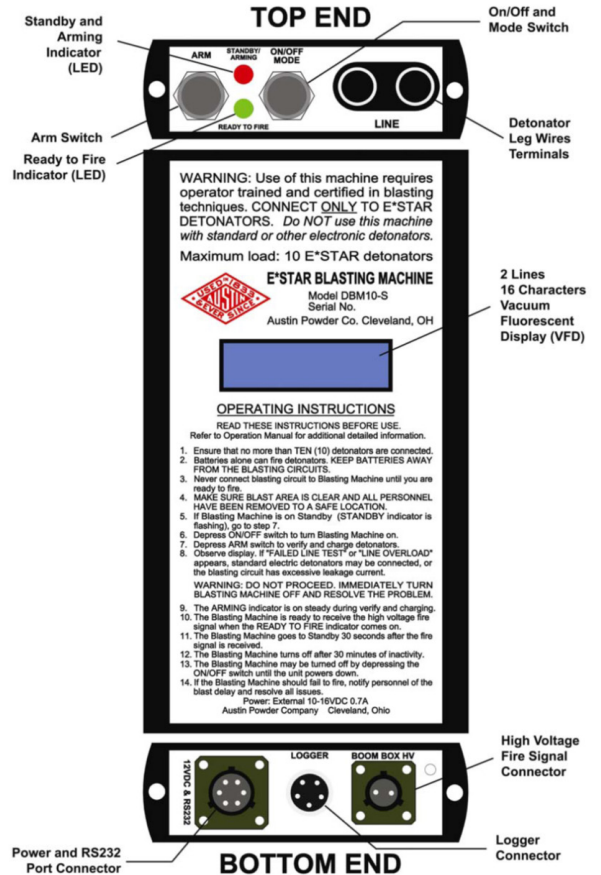

REQUIRED EQUIPMENT

The use of this system requires specific training in all components. This training is in addition to the normal, required training that all blasters and blasting personnel have received.

Only equipment specifically designed for use with Austin Powder E★STAR Seismic detonators is permitted. The currently approved equipment is a DLG 1600-100-S logger and a DBM 10-S Digital Blasting Machine* manufactured by Dan-Mar Co., Inc. An “operators” manual is to be available at all times when using this equipment.

*Warning: The DBM 10-S Digital Blasting Machine is designed for use only with E★STAR Seismic detonators. **Do Not attempt to use this blasting machine with any other detonator.** The misuse of this blasting machine with standard electric detonators may result in instantaneous detonator initiation.

STANDARD PACKAGING DETAILS

E★STAR Seismic Detonator Packaging					
Length		Case Wt		Case Count	Wire Configuration
[ft]	[m]	[lb]	[kg]		
25	7.6	21.52	9.77	70	Fast 8
35	10.7	24.76	11.24	60	Fast 8
45	13.7	26.03	11.82	50	Fast 8
55	16.8	25.34	11.51	40	Fast 8
65	19.8	34.12	15.49	45	Spooled
85	25.9	42.94	19.50	45	Spooled
100	30.5	49.56	22.50	45	Spooled
120	36.6	27.91	12.67	20	Spooled
140	42.7	31.83	14.45	20	Spooled
160	18.8	35.75	16.23	20	Spooled
180	54.9	39.67	18.01	20	Spooled
200	61.0	43.59	19.79	20	Spooled
220	67.1	47.51	21.57	15	Spooled
240	73.2	51.43	23.35	15	Spooled

Disclaimer of Warranties and Limitations of Liabilities: Products described in this document are sold by Austin Powder without warranty; express, implied or statutory or as to MERCHANTABILITY, except as expressly stated in Austin Powder’s straight bill of lading. Under no circumstances shall seller be liable for loss of anticipated profits, consequential damages or incidental damages. For more information and service locations please contact Austin Powder’s headquarters:



AUSTIN POWDER

Our Mission is to improve the world we live in through the safe and responsible use of explosives.